



**ROHRBAUGH
FIREARMS**


Disassembly and Lubrication Instructions




Disassembly of R9 & 380



1. Remove Magazine and make sure that the chamber is empty!!!
2. Grip Gun with your left hand as shown above.

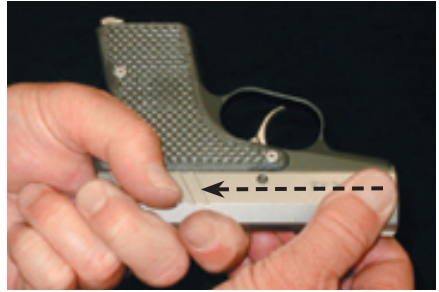

3. Turn the Gun over and with your right hand pull the slide toward the rear and line up the hole with the pin.

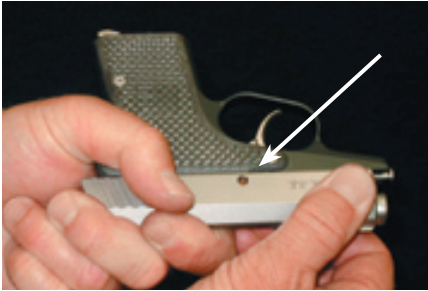

4. When the pin is lined up with the hole, hold the slide in position with your left hand.



5. Continue to hold slide in position and turn the gun over.




6. Push the pin out.




7. With the pin out the slide can now be removed.
8. To re-assemble the gun just reverse the process.

Lubrication of R9 & 380

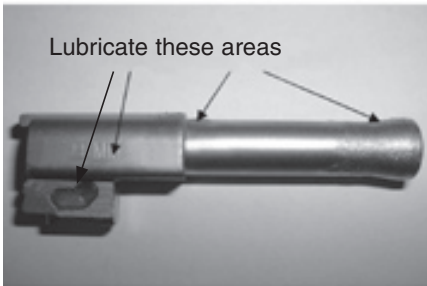

9mm barrel shown


Lubrication: Use quality gun oil.

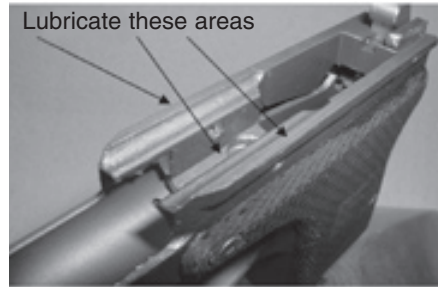

The Recoil System: This system must be assembled as shown to operate properly. Using a pair of channel-lock pliers, grab the recoil system by the front end cap and by the base of the small collar, which is where the outer recoil spring's end rests, and carefully compress the spring. Then insert the complete recoil system into the barrel/slide assembly as shown, releasing the pliers. The slide assembly is now ready to be put back into the frame.

Note: Replace outer recoil spring after 200 rounds.

R9 & 380 Trigger Assembly

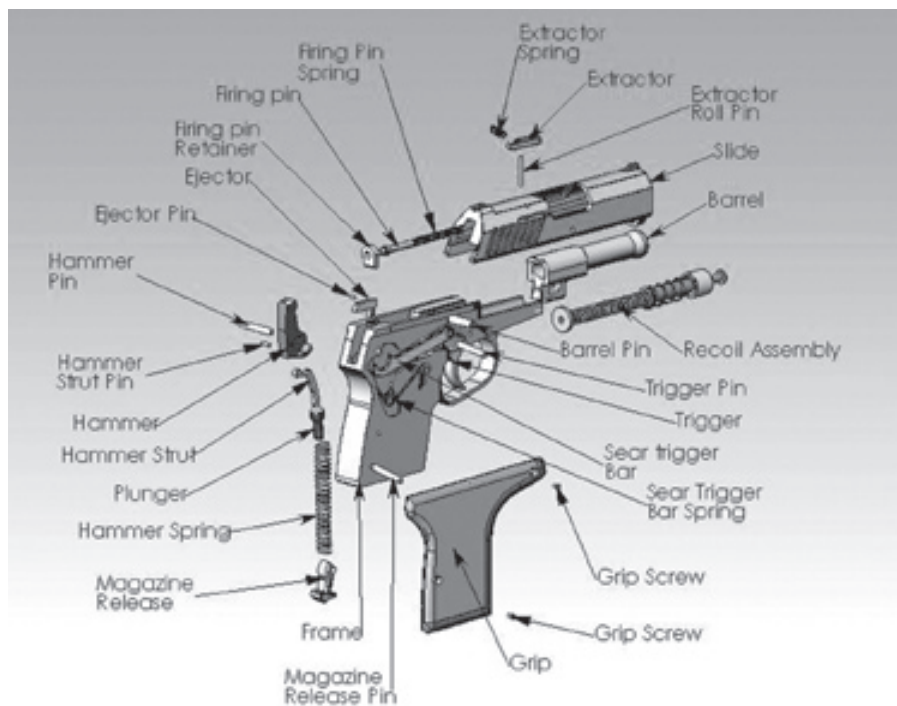

ROHRBAUGH FIREARMS

P.O. Box 785, Bayport, NY 11705

631-242-3175

Fax: 631-242-3183 • www.rohrbaughfirearms.com